


Class 1

Total Pressure Governor (TPG) OEM Quick Manual

INSTALLATION

Mount the TPG on the operator's panel with four #10 screws. The dimensions in the detail below are in inches [millimeters].

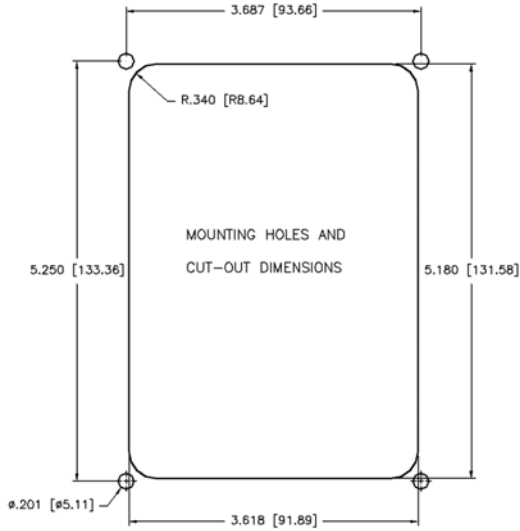

WIRING HARNESS

The main system harness (p/n 117666) is comprised of a pair of harnesses: the power/communication harness (depicted below in blue) and the signals harness (depicted below in green).




For the analog control option, add harness wires (p/n 117683) depicted above in red.

PRESSURE TRANSDUCER INSTALLATION

Install the pressure transducer (p/n 113557) on the discharge side of the pump. The pressure connection is a 1/4-18 NPT male port. A 'T' fitting can be used to share the pressure gauge outlet on the discharge manifold.

VERIFY ENGINE RPM

Verify proper J1939 CAN connection to the engine's ECM by monitoring the RPM display of the TPG while the engine is running. The display should show accurate RPM information.

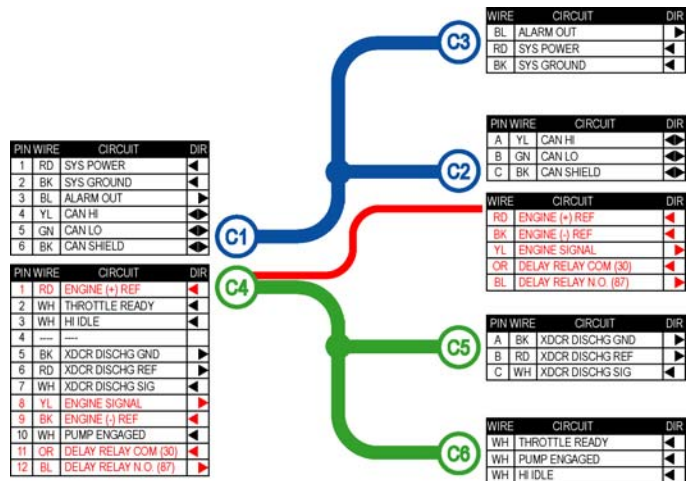

VERIFY INTERLOCKS

The TPG requires OEM provided interlocks THROTTLE READY and PUMP ENGAGED for proper operation. The TPG utilizes backlit text to indicate interlock status.

Activate the throttle ready interlock. (Apply system power to pin 2 of connector C5).

Verify the **THROTTLE READY** text below the display illuminates.

- ▶ The TPG will operate in RPM mode only and cannot be changed to pressure mode.



Activate the pump engaged interlock. (Apply system power to pin 10 of connector C5). Verify the **PUMP ENGAGED** text below the display illuminates.

- ▶ The TPG will not operate in any mode without the THROTTLE READY interlock.



Activate the throttle ready and pump engaged interlocks. (Apply system power to pins 2 and 10 of connector C5).

Verify the **PUMP ENGAGED**, **OKAY TO PUMP**, and **THROTTLE READY** text below the display illuminates.

- ▶ The TPG will operate in either mode.



ZERO CALIBRATE THE PRESSURE TRANSDUCER

The pressure indicated by the TPG may not show '0' when the pump discharge pressure is actually zero due to ambient pressure and altitude at your locale.



Display shows **MENU 04 SECS** and begins counting down. Continue holding IDLE and MENU until the display shows ***SETUP MENU*** (4 seconds) and then **MENU LEVEL 2** (2 seconds).



3 TIMES

The display shows the menu item: **-SENSOR CAL-**.



ONCE

Press the INC switch once. The display shows **INT:ZERO=XXX**.



+ HOLD

Press the INC switch and hold. The display shows **DIS:LIVE=XXX**. Verify the value is between 130 and 155. Release the INC switch. The display will show **DIS:ZERO=XXX**.



ONCE

Press the PRESET switch once. The display shows **NEW ZERO=XXX**. Verify the value is between 130 and 155.



ONCE

Press the IDLE switch once. The display shows **—EXITMENU—** and then restarts normal operation.

VERIFY ENGINE CONTROL

Activate the throttle ready and pump engaged interlocks. (Apply system power to pins 2 and 10 of connector C5).

Verify the **PUMP ENGAGED**, **OKAY TO PUMP**, and **THROTTLE READY** text below the display illuminates.



ONCE

Press the MODE switch once. The display shows **GOV=PRESSURE**. The PSI indicator is illuminated **YELLOW**.



ONCE

Press the MODE switch once. The display shows **GOV=THROTTLE**. The RPM indicator is illuminated **BLUE**.



OR



Engine RPM will change when pressing either the INC or DEC switches.



ONCE

Press the IDLE switch once. The display shows **IDLE** and the engine RPM will reduce to the idle RPM. The display then shows **RPM XXXX**.

For detailed operation and troubleshooting consult the full manual (p/n 117684) available from the Class 1 web site

www.Class1.com

Class 1

Unit of IDEX Corporation
607 NW 27th Avenue
Ocala, FL 34475 U.S.A

Phone: 1.800.533.3569 • 352.629.5020

Fax: 1.800.520.3473 • 352.629.2902

www.class1.com